



# Kodak EasyShare Z740 Lens Cover Replacement

How to remove the lens cover from the camera.

Written By: Kirsten Price



## INTRODUCTION

The lens cover protects the lens of the camera from being scratched or damaged while not in use. If the cover breaks or cracks and a replacement needs to be done, you can follow the steps in the following guide.

## Step 1 — Lens Cover



- Remove lens cover from the camera by squeezing the protruding button on each side of the cover and pulling.


## Step 2



- Pull the lens cover string toward the ground so that the loop underneath the metal slab is on top of the cover string.
- Push up so that the string starts to come out of the top of the loop.
- Grab the string from above the loop and pull.




## Step 3

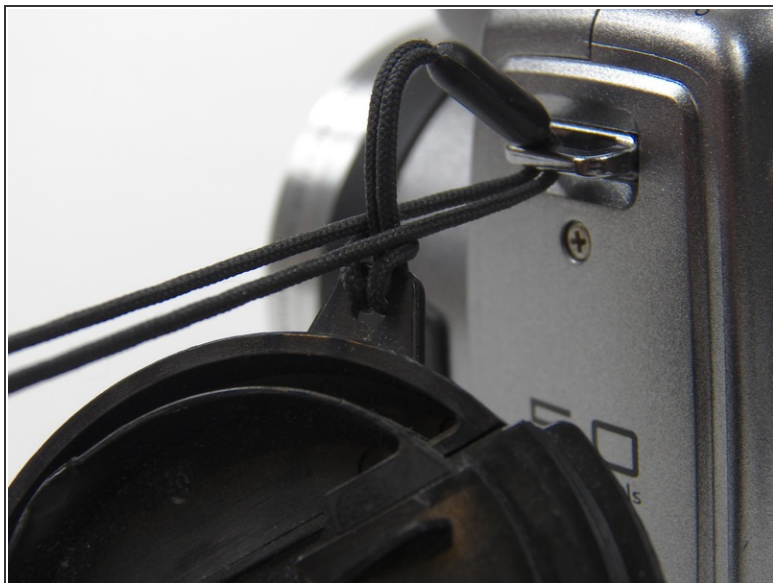

- Feed the string on top into the metal slab while pulling the loop toward you until the plastic piece stops you from pulling any further.

## Step 4

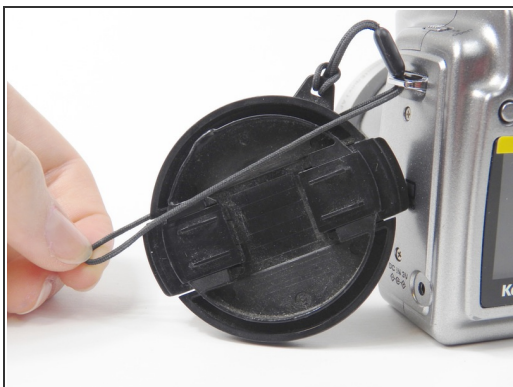

- Separate the two pieces of the loop and pull the lens cover up in between them.

## Step 5



- Pull the lens cover and the sting will come out of the metal slab.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 08:48:02 AM.